talentaudio.com

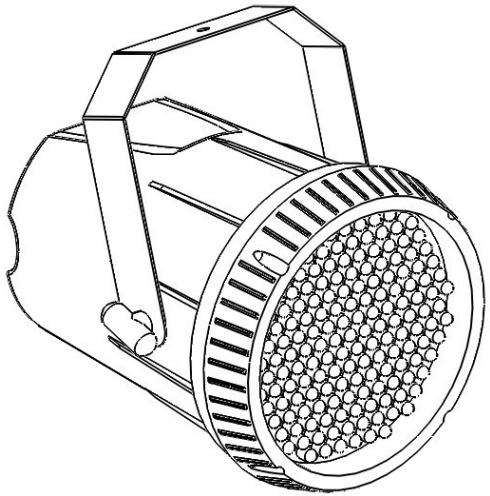

MINI-ZOT

Lightweight LED Strobe Light with Bracket

User Manual

Please read the instructions carefully prior to use

Thank you for choosing the Talent MINI-ZOT. For your safety, please read this user manual carefully before installing the device.

SAFETY INSTRUCTIONS

If the device has been exposed to temperature or environment condition changes, do not switch it on immediately. Resulting condensation could damage the device. Leave the device switched off until it has reached room temperature.
This device falls under protection-class I. Therefore it is essential that the device be grounded.

Make sure that the available voltage is not higher than stated on this device: 110 VAC.
Never operate the stroboscope without the glass pane or with a broken glass pane.

Ensure the power cord is never crimped or damaged. If it is damaged, ask your dealer or authorized agent to replace the power cord.
Always disconnect from power when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull the plug out of the wall using the power cord.
During initial start-up, some smoke or smell may arise. This is normal and should decrease gradually.

CAUTION:

1. Be very careful during installation.

2. Never look directly into the light source. Those diagnosed with epilepsy could suffer a seizure from the output of this fixture.
3. Please be aware that damages caused by modifications to the device are not subject to warranty. Keep away from children and non-professionals.

GENERAL GUIDELINES

This device is a stroboscope for decorative effects. This device is only allowed to be operated with 100 to 120 VAC, 60 Hz and is designed for indoor use only.

Do not shake the device. Avoid brute force when installing or operating it.
When choosing the installation spot, please make sure that the device is not exposed to extreme heat, moisture, or dust. The minimum distance between light-output from the projector and the illuminated surface must be more than 1-1/2 feet.
Operate the device only after having familiarized yourself with its functions. Do not permit operation by person not qualified to operate this device. Most damages are the result of unprofessional operation.
Please use the original packaging if the device is to be transported.

For safety reasons, any modifications of this device voids its warranty. Furthermore, any other operation may lead to short-circuit, burns, electric shock, lamp explosion, crash, etc. If this device is operated in any way different to that described in this manual, the product may suffer damage and the warranty becomes void.

CLEANING AND SERVICING

The tips below should be followed when performing service:

1) All installation screws need to be tightly fastened and must not be corroded.
2) There must not be any deformation from heat on the housing, lens, bracket, or installation surface.
3) The electric power cables must not show any damage, material fatigue, or corrosion.

We recommend a frequent cleaning of this device. Please use a moist, lint-free cloth. Never use alcohol or solvents.
CAUTION: Disconnect from main power prior to servicing this device!

FEATURES AND SPECIFICATIONS

Lightweight high-tech plastic case

Adjustable flashrate (1-10 flashes/sec.)

Adjustable flash speed by knob

Very low power consumption

Very low heat without the need for a fan

Perfect for decorations or party-rooms

Power requirement: 110 VAC, 60Hz

Power consumption: 10 watts

LIGHT SOURCE : 63 9mm bright white LEDs

Carton Size : 5.91" dia. X 7.87" L

WEIGHT : 1.76 lbs.